




C88/C87/D88 Quick Connect Installation Instructions



Before you Begin



It is crucial that the OEM ink supplied with your printer is installed before you attempt to install your SubliJet IQ™ inks. This allows for two things: First, it primes the ink delivery system, ensuring that the SubliJet IQ™ ink will load more easily. Second, it familiarizes you with the basic operation of your printer. Please see the *EPSON Stylus C88/C87/D88 Printer User's Guide* for instructions on installation.

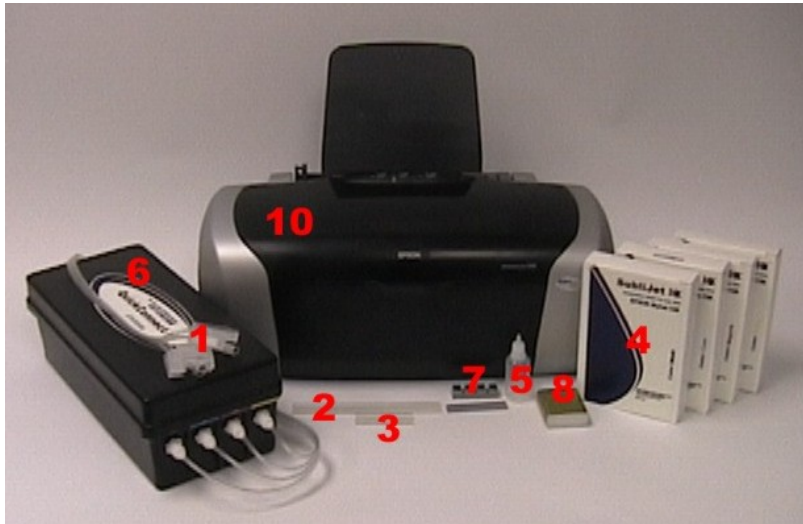

Please read this document thoroughly before installing the system to prevent voiding your warranty.

Components

1. Ink Cartridge + tubes
2. 1 x Long Tube Grip
3. 1 x Short Tube Grip
4. 4 x Ink Bags
5. Small primer bottle
6. Ink Box
7. Chips
8. Foam Block
9. Power Driver CD (Not Shown)
10. Printer

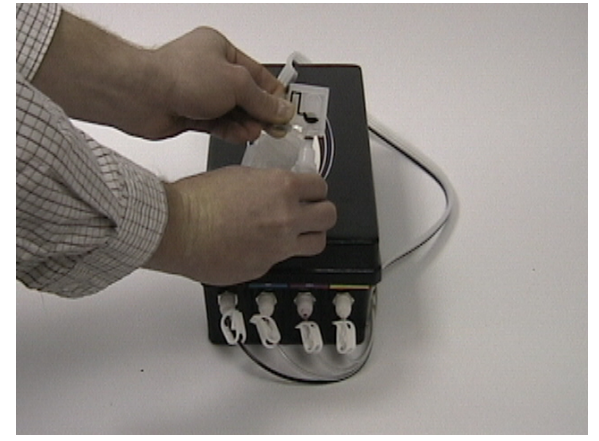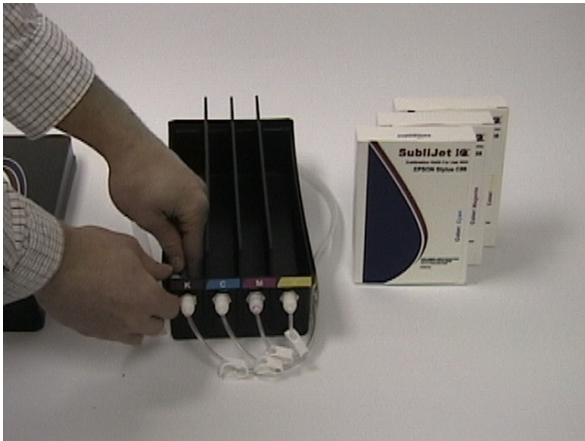

1. Clamp the tubes at the end of each line to prevent ink from entering the line before you clip on each bag. Then insert the ink bags into the ink box by clipping them into the connectors inside the box. Each section is marked with which color ink should be placed there.

2. Use the priming bottle to prime each line. To do this, unhook the clamp at the end of the line and squeeze the priming bottle to release all the air then insert it into the bottom of the cartridge to prime the line and fill it with ink. Once ink is in the reservoir, pinch together the clamp at the end of the line. Do this for each cartridge.

C88/C87/D88 Printer Setup Instructions





1. Turn the printer on, lift the lid, and press the ink button



2. The cartridge bay will shift into the remove position. Remove any installed cartridges.



3. Install the cartridge chips in the cartridge slot on the front of the cartridge bay. **Note: The chip has an up arrow on the back of it showing which way it should go in the printer.**

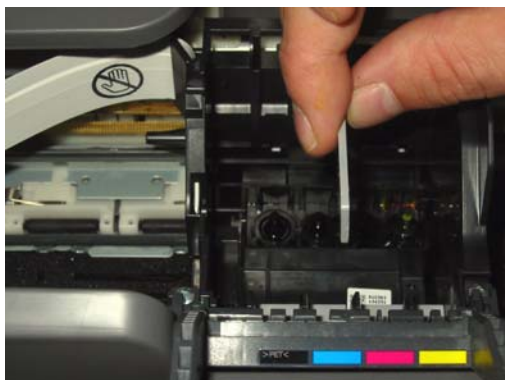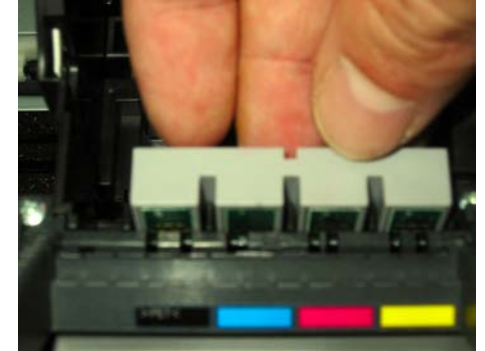

4. Insert the plastic cross bar into place by sliding the notched end into the back of the chip holders as shown.



5. Gently slide the cartridges through the hole in the cartridge cover. Start with the black cartridge on the left and attach the cartridges in this order:
(from left to right)
Black, Cyan, Magenta, and Yellow



6. Obtain the foam block, place it on top of the cartridges, and close the cartridge cover. Be careful not to pinch the tubes when closing the cover.




7. Obtain the long tube holder and attach it on the flat gray area just beneath the buttons on the printer. The end of the tube must be flush with the open edge of the printer as highlighted.



8. Slide tubing into the holder for placement.




9. Position the tubing so that the black line on it lines up with the edge of the tube holder. Note: This will leave enough slack so that the cartridge bay can easily slide from one side of the printer to the other without creating tension on the tubes.

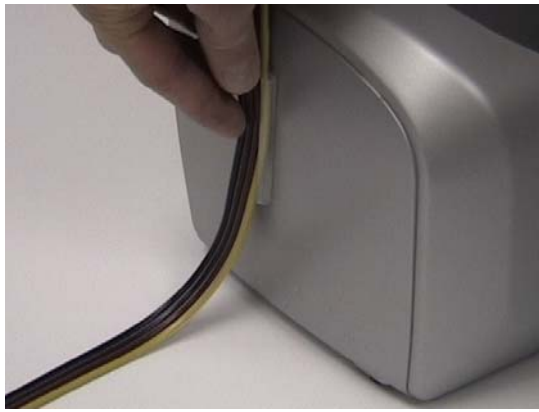

10. Obtain the short tube holder and attach it to the left hand side of the printer. Slide tubes into the holder for placement.



11. Unclamp the end of each tube so that you are ready for printing. Press the ink button to move the print head back to the ink cartridge parked position.

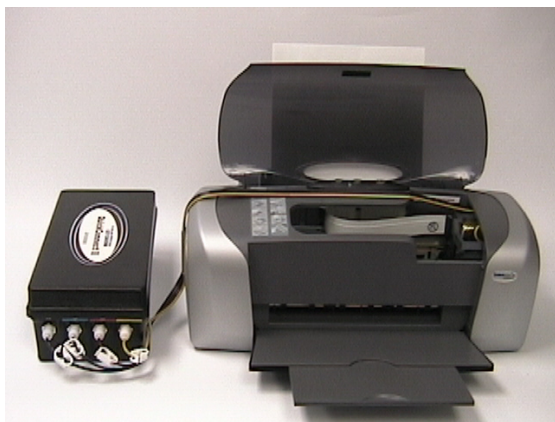

Congratulations! You've successfully installed a C88/C87/D88 Quick Connect II ink system and printer.

Tips:

- **Make sure you install Power Driver from the CD that came with your Quick Connect II system. Refer to the Power Driver documentation and video tutorial on how to use Power Driver.**
- **Perform a nozzle check from Power Driver. A few cleanings may be necessary to get a good nozzle check.**
- **You may want to remove the printer lid or leave it open at all times.**
- **You may have a little air in your lines but this will clear after a few prints.**
- **If you are going to leave your system without using it for several days you should clamp your lines with the tube clamps.**
- **Do not raise the ink box higher than the printer.**



Tip