

R1800 Quick Connect Installation Instructions




Please read this document thoroughly before installing the system to prevent voiding your warranty.

Check to ensure you have all components shown in picture.

1. Ink Cartridge + tubes
2. 1 x Long Tube Grip
3. 1 x Short Tube Grip
4. Chips
5. Ink Bags (Not included with Quick Connect system)
6. Small primer bottle
7. Cartridge Cover
8. Ink Channel Configuration Label
9. Rubber Gloves
10. Ink Box
11. Chromablast R1800 Driver CD (Not Shown)
12. SubliJet R1800 IQ Driver CD (Not Shown)

Place the Ink Configuration Label over the top of the existing label on the bottom section of the Quick Connect Box. Make sure to align the label above the exterior ink connectors.

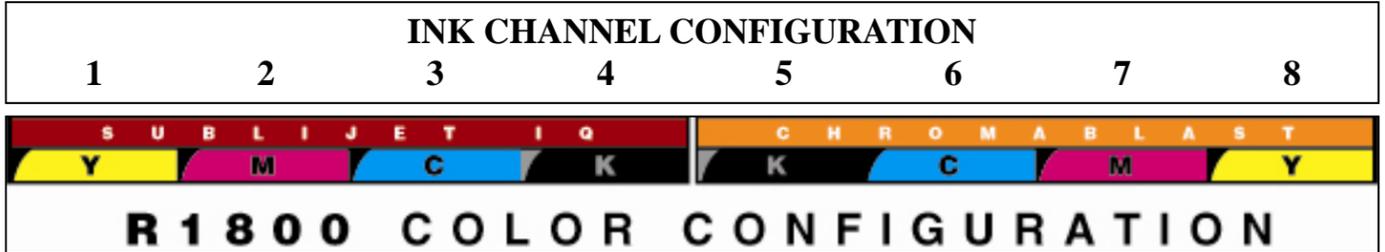

1. Clamp the tubes at the end of each line to prevent ink from entering the line before you clip on each bag. Then insert the ink bags into the ink box by clipping them into the connectors inside the box. Refer to the Graphic above for the correct color configuration set-up.



2. Use the priming bottle to prime each line. To do this, unhook the clamp at the end of the line and squeeze the priming bottle to release all the air then insert it into the bottom of the cartridge to prime the line and fill it with ink. Once ink is in the reservoir, pinch the clamp at the end of the line. Do this for each cartridge.



R1800 Printer Setup Instructions

1. Turn the printer on and press the cartridge replacement button.



2. The cartridge bay will shift into the remove position. Remove any installed cartridges.



3. Remove the cartridge cover by gently pushing on the right side and twisting it to the right.

R1800 Quick Connect Installation Instructions



4. Install the cartridge chips as shown above. Start by lining up the chip with the yellow dot with the yellow ink slot in the cartridge bay. Next line up the chip with the black dot with the black slot in the cartridge bay. Finally insert the plastic cross bars into place by sliding the notched end into the back of the chip holders.



5. Move the cartridge bay to the left of the gray bar before installing the cartridges. Start with the yellow cartridge on the left and attach the cartridges in the order below, matching the corresponding SubliJet and Chromablast ink colors to the appropriate ink channel: It can be helpful to mark a number "8" with a black marker on the top of the far right cartridge (ChromaBlast Yellow). This will eliminate installing the cartridges in the wrong ink channel location.

Configuration	Channel							
	1	2	3	4	5	6	7	8
SubliJet™	Y	M	C	K		C	M	Y
Chromablast™					K	C	M	Y



6. When all cartridges are in place, attach the custom cover. When closing the cover be careful not to pinch the tubes.



7. Place the large tube holder in the middle of the gray bar and attach it to the printer.

8. Attach the short tube holder to the right of the printer where the tubes hang down.

9. Congratulations you have successfully installed a R1800 Quick Connect II ink system.

Tips:

- Make sure you install the SubliJet R1800 IQ and Chromablast R1800 drivers from the CD's that came with your Quick Connect II system. Refer to the Hybrid Dual Decorating System documentation on how to use the software Drivers.
- Perform a nozzle check from SubliJet IQ and Chromablast™ drivers. A few cleanings may be necessary to get a good nozzle check.
- You may want to remove the printer lid or leave it open at all times.
- You may have a little air in your lines but this will clear after a few prints.
- Do not raise the ink box higher than the printer.
- If you are not going to use your system for several days, you should clamp the ink lines with the tube clamps.



Tip