


Tips For Best Results!

TechniPrint® 4.0 Transfer Instructions

TechniPrint® 4.0 is a hot peel design. It is recommended to use a heat press set at 375°F and to press for 25 seconds. The paper is removed while the transfer is still hot. Because the paper is peeled hot there will be a rough surface to the final transferred image. Most people prefer to remove this rough feel. This can be removed by covering the transfer with a parchment release sheet and pressing a second time for a few seconds.

The final transfer can be given a softer hand. The softer hand is created by a gentle stretching of the t-shirt right after the paper is peeled away and while the image is still hot and pliable. If the transfer is allowed to cool down it is not as easily stretched and is not as flexible. But the transfer can be reheated and the stretching repeated if necessary.

When stretching the shirt alternate from gently stretching it from side-to-side to stretching it from top-to-bottom. Stop stretching when the transfer has cooled.

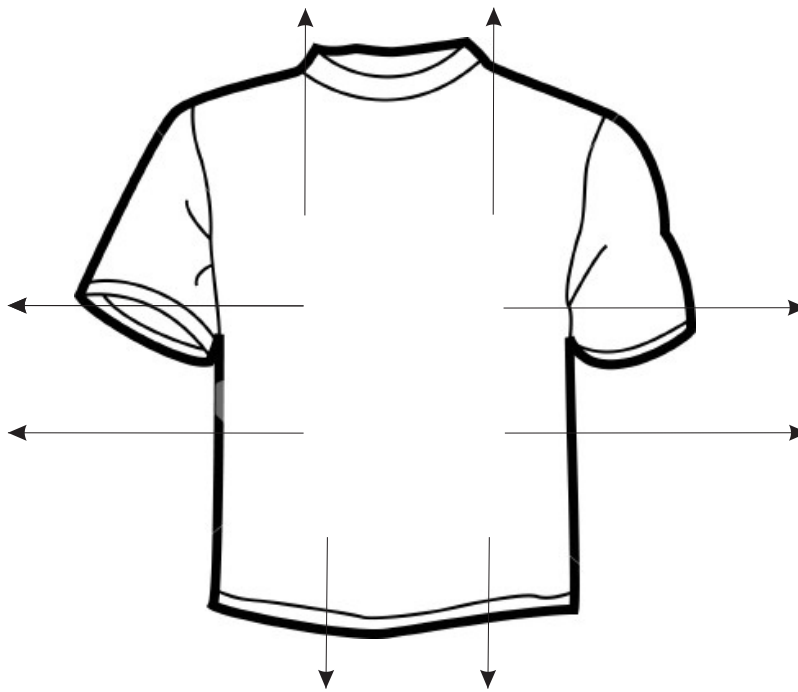

The t-shirt image shows what is meant by the directions to stretch the shirt after removing the paper backer from the transfer.

If a stiffer hand is preferred then the t-shirt should not be stretched. In the making of a stiffer t-shirt, peel away the paper backer while the transfer is still hot, cover the transferred image with a release paper like a parchment baking sheet and then repress for 5 seconds. Remove the parchment sheet after the transfer has cooled and it will have a smooth feel.